









# PRESENTERCARD QUICK START GUIDE

Button	Button Name	Function
	Start/Stop	Opens/closes polling
	Back	Moves backwards through a slide deck or question list
	Forward	Advances through a slide deck/question list
	Programmable button one	Programs button one
	Programmable button two	Programs button two
	Programmable button three	Programs button three
	Show/Hide	Switches between the PowerPoint presentation and blank screen; or shows or hides all windows
	Channel	Places PresenterCard in programming mode



## Configuring PresenterCard for TurningPoint 2008

- 1 Open TurningPoint 2008, click **Tools** and select **Settings**.
- 2 Select **Response Device** from the left pane and scroll to **PresenterCard** in the right pane.
- 3 To the right of PresenterCard Device ID, click **[None]**.
- 4 Press **any button** on the PresenterCard to pair it with TurningPoint 2008.
- 5 Once the Device ID appears in the *PresenterCard Pairing* window, click **Pair**.

## Configuring PresenterCard for TurningPoint AnyWhere

- 1 Open TurningPoint AnyWhere PC or Mac and select **Settings/Preferences** from the launchpad.
- 2 Select **Response Device** from the left panel and scroll to **PresenterCard** in the right panel.
- 3 To the right of PresenterCard Device ID, click **Change**.
- 4 Press **any button** on the PresenterCard to pair it with TurningPoint AnyWhere.
- 5 Once the Device ID appears in the *PresenterCard Pairing* window, click **Pair**.

## Configuring PresenterCard for TurningPoint Cloud and TurningPoint 5

- 1 Select **Connections** from the left pane and scroll to **PresenterCard**.
- 2 To the right of PresenterCard Device ID, click **Change**.
- 3 Press **any button** on the PresenterCard to pair it with TurningPoint Cloud/TurningPoint 5.
- 4 Once the Device ID appears in the *PresenterCard Pairing* window, click **Pair**.

## Changing the PresenterCard Channel

- 1 Press the **Channel button**.
- 2 Press the **Back** or **Forward button** to decrease or increase channel numbers.
- 3 Once the desired channel is visible on the display, press the **Channel button** to set the channel.